Installation Guide

2024+ Toyota Land Cruiser (LC250) Alpharex Tail Lights



This installation guide provides a detailed, step-by-step process for installing your new Alpharex Taillights on your 2024+ Toyota Land Cruiser (LC250).

DO NOT USE DIELECTRIC GREASE / REMOVE ANY DEBRIS OR ANY PRE-EXISTING GREASE OR WEATHER SEALANT

Contents

Step 1: Uninstall OEM Tail Lights P1

Step 2: Install Alpharex Tail lights P3

Tools needed:

Panel remover
10mm Socket/ Ratchet

Installation time: 0.5 hours

Difficulty Level: 1/5


Step 1 : Uninstall OEM Tail Lights


- To begin removing the tail lights, open the rear liftgate and locate the tail light assemblies on each side of the vehicle.



- Once located, remove the plastic covers concealing the tail light mounting bolts. These covers are secured by locking tabs.
- Carefully apply firm, even pressure to pull the covers off and expose the two (2) 10mm mounting bolts underneath.



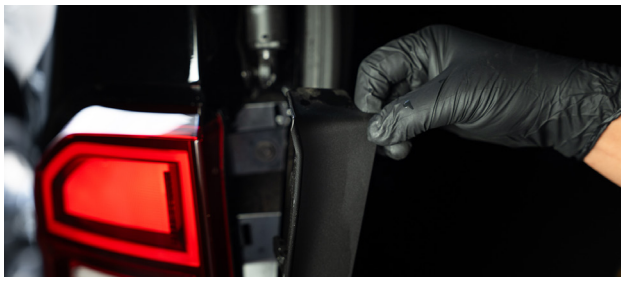


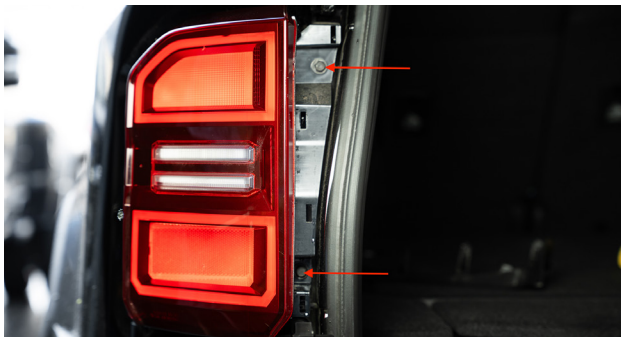


Step 1 : Uninstall OEM Tail Lights

- Remove the two (2) 10mm mounting bolts securing the tail light. Once removed, carefully pull the tail light straight back with firm, even pressure to release the guiding pin.




- With the tail light free, locate and disconnect the single wiring connector from the vehicle to fully remove the tail light assembly.

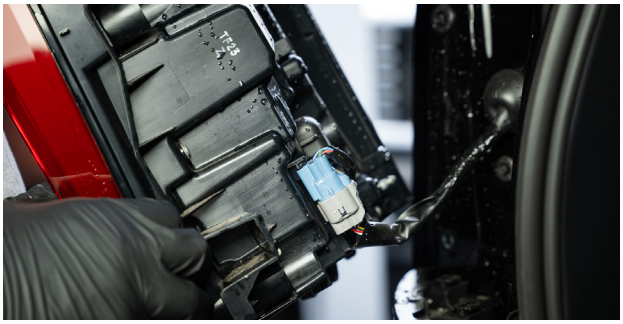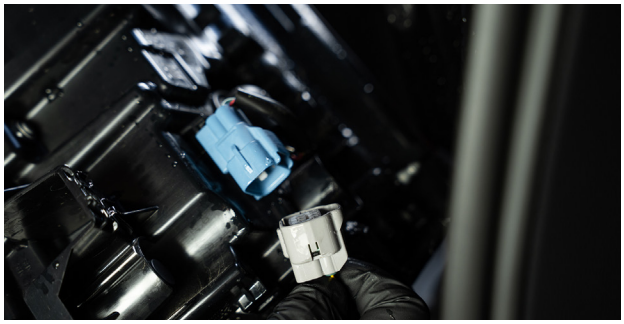- With the factory tail lights fully removed, you can now proceed with installing your new Alpharex tail lights.




Step 2: Install Alpharex Tail lights


- To begin the installation, locate your new Alpharex tail light assemblies.



- Connect the vehicle's single wiring connector to the back of the new Alpharex tail light. Once connected, carefully align the tail light with the guiding pin and press it firmly into position until it snaps securely into place.



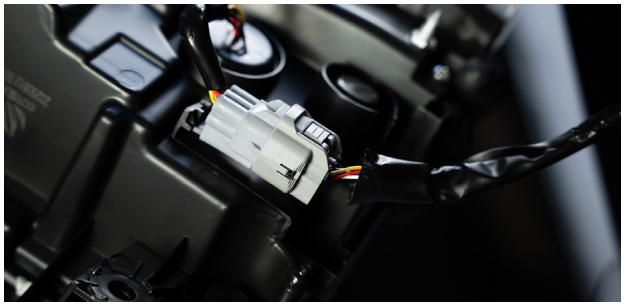

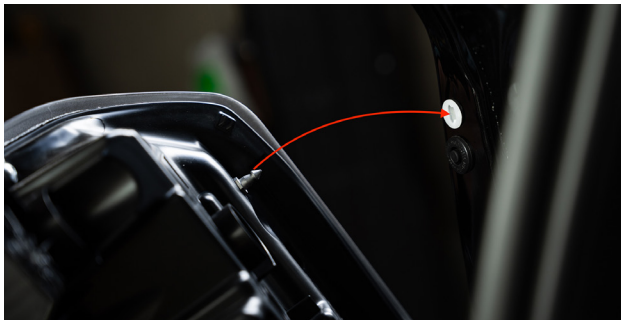



Step 2: Install Alpharex Tail lights

- With the tail light securely in place, reinstall the two (2) 10mm mounting bolts and tighten them securely. Once complete, reinstall the plastic mounting bolt covers, ensuring they snap firmly into place.





- With everything securely reinstalled, the installation of your new Alpharex tail lights is now complete!

